


 
 
 


 


 







 











 




**Originalfernbedienung Ersatzfernbedienung**

	VHS/DVD Power		Power
	Direct TV Rec		Subt
	VHS/DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel / Reset		Exit
	Input Select		Guide
	CH+ / Tracking/V-Lock+		Ch +
	CH- / Tracking/V-Lock-		Ch -


**Originalfernbedienung Ersatzfernbedienung**

	Create Chapter		TV/R
	I<< Skip		I<<
	Skip >>I		>>I
	REW / << Slow/Search		<<
	FF / Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Direct Navigator / Top Menu		D. Menu
	Functions		List
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Sub Menu		Menu
	Return		Back




 




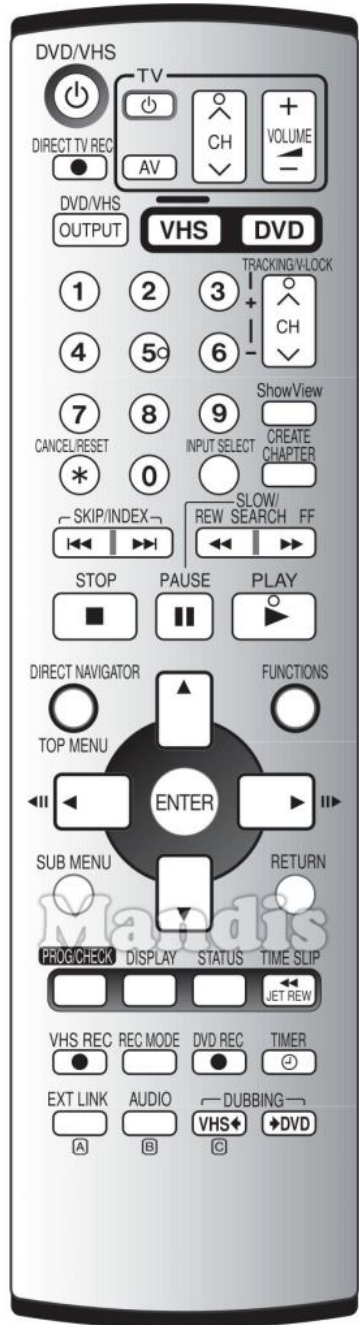


 

 

 



 

 



 
















**Originalfernbedienung Ersatzfernbedienung**

 VHS/DVD Power	 Power
 Direct TV Rec	 Subt
 VHS/DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel / Reset	 Exit
 Input Select	 AV
 CH+ / Tracking/V-Lock+	 Ch +
 CH- / Tracking/V-Lock-	 Ch -

**Originalfernbedienung Ersatzfernbedienung**

 ShowView	 Media
 I<< Index	 I<<
 Index >>I	 I>>
 REW	 REW
 FF	 FF
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Prog/Check	 Sleep
 Display	 Info
 Jet Rew	 Shift + I<<



