



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Internet		List
	Netflix		Media
	Miracast		Guide
	DLNA		Info
	PopUp Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Top Menu		D. Menu
	Home		Smart
	Return		Back
	Option		Options
	OK		Ok
	Up		Up
	Down		Down
	Right/II>		Right
	<II/Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	>>		>>
	<<		<<
	Pause		Pause

 

 

 





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	I<<		I<<
	Stop		Stop
	Subtitle		Subt
	Audio		Dual
	3D Setting		3D
	DIM		Exit
	Status		AV
	Playback/Info.		TV/R
	High Clarity		Text
	Picture Setting		Format
	-10s Manual Skip		Ch -
	+60s Manual Skip		Ch +
	Power Tv		Shift + Power
	AV/Input Tv		Shift + AV
	Sound/Effect		Mute
	Vol+ Tv		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol- Tv		Vol -
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -

