



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto Setup		Auto
	Computer		Comp / Video
	Enter		Enter
	Network		Source
	Video		Shift + Comp / Video
	Page Up		Shift + Vol + / Page +
	Page Down		Shift + Vol - / Page -
	Menu		Menu
	Return		Shift + Menu
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Freeze		Freeze / Timer
	Default		Volt / Focus
	Computer		3D / Invert

Originalfernbedienung Ersatzfernbedienung

	AV Mute		Blank / Mute
	Index Window		Eco / Aspect
	Multi-Live		Help / Info
	Function		Mode
	Syde by Syde		Shift + Up
	Digital Zoom+		+ / Play
	Digital Zoom-		- / Stop
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -



Search