

 

 

 

 
 
 







 

 




 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	PlayTimer		Pause / Step / Freeze
	Clock/Timer		Shift + Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DEL		Exit / Cancel / Clear
	+10		Guide / EPG / -/--
	Program		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Bluetooth		Shift + 9
	CD/USB		Red / Netflix / Search
	Radio/Ext-In		Green / APP / Repeat
	I<<		I<< / Preset-
	Play/Pause		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	OK		OK
	D.Bass		Text / Goto
	Sound		Sound / Title
	Preset EQ		AV / Input / RDS
	Display		Display / Media



