



 

 

 

 

 

 

 

 

 






 






 




Originalfernbedienung Ersatzfernbedienung

|   |       |   |                   |
|---|-------|---|-------------------|
|    | Power |    | Power             |
|    | 1     |    | 1                 |
|    | 2     |    | 2                 |
|    | 3     |    | 3                 |
|    | 4     |    | 4                 |
|    | 5     |    | 5                 |
|    | 6     |    | 6                 |
|    | 7     |    | 7                 |
|    | 8     |    | 8                 |
|    | 9     |    | 9                 |
|    | 0     |    | 0                 |
|   | Lang  |   | Audio / Lang I/II |
|  | [=].. |  | Subtitle / EQ     |
|  | Mute  |  | Mute / Dimmer     |
|  | Home  |  | Shift + Menu /    |
|  | Smart |  | Smart / List      |
|  | Vol+  |  | Vol+              |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |                       |
|---|--------|---|-----------------------|
|    | Vol-   |    | Vol-                  |
|    | P+     |    | CH+ / Page+           |
|    | P-     |    | CH- / Page-           |
|    | Up     |    | Up                    |
|    | Down   |    | Down                  |
|    | Right  |    | Right                 |
|    | Left   |    | Left                  |
|    | OK     |    | OK                    |
|    | [G]    |    | Guide / EPG / -/--    |
|    | i      |    | Info / Angle          |
|    | ←      |    | Back / Return         |
|   | Exit   |   | Exit / Cancel / Clear |
|  | Menu   |  | Menu / Home           |
|  | Source |  | AV / Input / RDS      |
|  | Text   |  | Text / Goto           |
|  | <<     |  | << / Tune-            |
|  | Stop   |  | Stop / Hold           |



