 





Originalfernbedienung	Ersatzfernbedienung
 Power On	 Power
 Standby	 Shift + Power
 Auto	 Auto
 Keystone	 Shift + Up
 Menu	 Menu
 Return	 Shift + Auto
 Default	 Shift + - / Stop
 Function	 Eco / Aspect
 Up	 Up
 Down	 Down
 Vol-	 Vol - / Page -
 Left	 Left
 Right	 Right
 Vol+	 Vol + / Page +
 Enter	 Enter
 Computer1	 Comp / Video
 Computer2	 Shift + Freeze / Timer

Originalfernbedienung	Ersatzfernbedienung
 HDMI	 Shift + Menu
 Memory Viewer	 Mode
 Miracast	 Shift + Mode
 Panasonic APP	 3D / Invert
 ID Set	 Volt / Focus
 ID All	 Help / Info
 Video/S-Video	 Shift + Comp / Video
 Page Up/1	 Shift + Vol + / Page +
 D.Zoom+/2	 + / Play
 Freeze/3	 Freeze / Timer
 Page Down/4	 Shift + Vol - / Page -
 D.Zoom-/5	 - / Stop
 Mute	 Blank / Mute
 AV Mute	 Source

