




















 

 










 






 
 
 
 

























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	EPG		Guide / EPG / -/--
	TXT		Text / Goto
	Input		AV / Input / RDS
	Menu		Menu / Home
	*1		Picture / Format
	FPay		Shift + Display / Media
	[+]		Zoom / Size
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Multimedia		Display / Media
	Netflix		Shift + Red / Netflix /
	Internet		Smart / List
	Up		Up
	Down		Down
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Q.Menu		D.Menu / Top
	Back		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5



