



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Menu		Menu / Home
	Picture		Picture / Format
	TV Input		TV/Radio /
	AV Input		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Option		Setup / OPT /
	Back/Return		Back / Return
	Up		Up
	Down		Down
	Left		Left
	Right		Right

**Originalfernbedienung Ersatzfernbedienung**

	OK		OK
	Netflix		Shift + Red / Netflix /
	Home		Shift + Menu /
	Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer
	Text		Text / Goto
	STTL		Subtitle / EQ
	List/Provider		Shift + Smart / List
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5



