



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	Select Drive		Smart / List
	AV Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	CH/Page Up		CH+ / Page+
	4		4
	5		5
	6		6
	CH/Page Down		CH- / Page-
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	ShowView		Picture / Format
	Delete/*		Zoom / Size
	0		0
	Input Select		AV / Input / RDS
	Prog/Check		TV/Radio /
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play/x1.3		Play / Slow
	i/Status		Info / Angle
	Guide		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Direct Navigator		D.Menu / Top
	Left/<II		Left
	Up		Up
	OK		OK
	Right/ II>		Right
	Function Menu		Menu / Home
	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Create Chapter		Yellow / YouTube / Repeat
	Blue/Manual Skip		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	EXT Link		Eject / Surround
	Direct Tv Rec		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Audio		Audio / Lang I/II
	STTL		Subtitle / EQ
	Display		Display / Media
	Time Slip		Sleep / Timer

