




















































Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power		Power	
Picture		Picture / Format	
AV input		AV / Input / RDS	
Input Tv		TV/Radio /	
Menu		Menu / Home	
Text		Text / Goto	
STTL		Subtitle / EQ	
APPS		Display / Media	
i		Info / Angle	
X/Exit		Exit / Cancel / Clear	
Home		Shift + Menu /	
Guide		Guide / EPG / -/--	
Netflix		Shift + Red / Netflix /	
Option		Setup / OPT /	
Return/Back		Back / Return	
Up		Up	
Down		Down	
		Right	
		Left	
		OK	
		Red	
		Green	
		Yellow	
		Blue	
		Mute	
		Vol+	
		Vol-	
		CH+	
		CH-	
		1	
		2	
		3	
		4	
		5	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
6			6
7			7
8			8
9			9
0			0
Last View			Fav / Marker / PC
?/eHelp			Audio / Lang I/II
My APP	 + 		Shift + Green / APP /
<<			<< / Tune-
Play			Play / Slow
>>			>> / Tune+
I<<			I<< / Preset-
Pause			Pause / Step / Freeze
>>I			>>I / Preset+
Stop			Stop / Hold
Rec			Rec / Rec Mode

