



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Power		Shift + Power
	TV Vol+		Shift + Vol+
	TV Vol+		Vol+
	TV CH+		Shift + CH+ /
	Drive Select		Text / Goto
	TV AV		Shift + AV / Input / RDS
	TV Vol-		Shift + Vol-
	TV Vol-		Vol-
	TV CH-		Shift + CH- /
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	7		7
	8		8
	9		9
	ShowView		Picture / Format
	*/Delete		Shift + Exit / Cancel / Clear
	0		0
	Input Select		AV / Input / RDS
	Status		Info / Angle
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play / 1.3		Play / Slow
	Time Slip		Sleep / Timer



