



Originalfernbedienung Ersatzfernbedienung

	Power Tv		Shift + Power
	Volume+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	AV Tv		Shift + AV / Input / RDS
	Volume- Tv		Vol-
	CH- Tv		Shift + CH- /
	Power VCR		Power
	OSD/Display		Display / Media
	Reset		Back / Return
	Tracking-V-Lock		CH+ / Page+
	Replay		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	AV Link		AV / Input / RDS
	Tracking-V-Lock Down		CH- / Page-
	Search		Red / Netflix / Search
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+






Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Play		Play / Slow
	Up		Up
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Left		Left
	OK		OK
	Right		Right
	>>		>> / Tune+
	I-Timer		Smart / List
	Stop		Stop / Hold
	Down		Down
	Pause/Step		Pause / Step / Freeze
	Prog/Check		TV/Radio /
	Cancel		Shift + Exit / Cancel / Clear
	SP/LP/EP		Picture / Format





Originalfernbedienung Ersatzfernbedienung

	Timer		Sleep / Timer
	Prog/Check Up	 + 	Shift + Up
	Date+		1
	On+		2
	Off+		3
	Prog/Check	 + 	Shift + Down
	Date-		4
	On-		5
	Off-		6

Originalfernbedienung Ersatzfernbedienung

