



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	Drive Select		Smart / List
	Input AV Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	Page/CH+		CH+ / Page+
	4		4
	5		5
	6		6
	Page/CH-		CH- / Page-
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	FPlay		Shift + Green / APP /
	Last View		Fav / Marker / PC
	0		0
	NET		Display / Media
	Netflix		Shift + Red / Netflix /
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	i/Status		Info / Angle
	Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-



