


















 


 


























 



 

 



 

 

 







Originalfernbedienung Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | VTR           |    | Power                       |
|    | Transmit      |    | Smart / List                |
|    | Pause/Still   |    | Pause / Step / Freeze       |
|    | Stop          |    | Stop / Hold                 |
|    | Still Adv     |    | Blue / Prime Video / Random |
|    | <<            |    | << / Tune-                  |
|    | Play          |    | Play / Slow                 |
|    | >>            |    | >> / Tune+                  |
|    | Rec           |    | Rec / Rec Mode              |
|    | -             |    | Left                        |
|   | Slow          |   | OK                          |
|  | +             |  | Right                       |
|  | Clock/Counter |  | Fav / Marker / PC           |
|  | Tape Remain   |  | Display / Media             |
|  | Reset         |  | Exit / Cancel / Clear       |
|  | Monitor       |  | D.Menu / Top                |
|  | VTR/TV        |  | TV/Radio /                  |

Originalfernbedienung Ersatzfernbedienung

|   |                  |   |                           |
|---|------------------|---|---------------------------|
|    | Input Select     |    | AV / Input / RDS          |
|    | Index            |    | Info / Angle              |
|    | Time Search      |    | Red / Netflix / Search    |
|    | Tracking/V-Lock- |    | CH- / Page-               |
|    | Tracking/V-Lock+ |    | CH+ / Page+               |
|    | Repeat           |    | Green / APP / Repeat      |
|    | Memory           |    | Yellow / YouTube / Repeat |
|    | Sleep            |    | Sleep / Timer             |
|    | Rewind           |    | Back / Return             |
|    | Audio Out        |    | Audio / Lang I/II         |
|   | 1                |   | 1                         |
|  | 2                |  | 2                         |
|  | 3                |  | 3                         |
|  | 4                |  | 4                         |
|  | 5                |  | 5                         |
|  | 6                |  | 6                         |
|  | Recording SP/LP  |  | Picture / Format          |



