 

























 



 





 











Originalfernbedienung    Ersatzfernbedienung

	Start/Stop		Power
	Play		Play / Slow
	Pause/Item		Pause / Step / Freeze
	Stop/Set		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	A DUB		Audio / Lang I/II
	Photo Shot		Picture / Format
	Date/Time		Sleep / Timer
	Menu		Menu / Home
	Zoom T		Up
	<I Still Adv		Left
	Still Adv I>		Right
	Reset		Exit / Cancel / Clear

Originalfernbedienung    Ersatzfernbedienung

	Zoom W		Down
	Vol+		Vol+
	Counter		Smart / List
	Vol-		Vol-
	OSD		Display / Media

