



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu / Home
	Picture		Picture / Format
	Input Tv		TV/Radio /
	Input AV		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Option		Setup / OPT /
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Back/Return		Back / Return
	Netflix		Shift + Red / Netflix /
	Home		Shift + Menu /
	Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer
	Text		Text / Goto
	STTL		Subtitle / EQ
	List/Provider		Smart / List
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6 mno	6	TUNER 6	6
7 pqrs	7	AUX - HDD 7	7
8 tuv	8	USB 8	8
9 wxyz	9	BLUETOOTH 9	9
? eHELP	?/eHelp	TOP MENU D.MENU	D.Menu / Top
0	0	HDMI - BAT 0	0
Recall	Recall	PC FAV MARKER	Fav / Marker / PC
<< button"/> <<	<<	TUNE- <<	<< / Tune-
Play	Play	SLOW	Play / Slow
>>	>>	TUNE+ >>	>> / Tune+
I<<	I<<	PRESET- I<<	I<< / Preset-
Pause	Pause	STEP - FREEZE II	Pause / Step / Freeze
>>I	>>I	PRESET+ >>I	>>I / Preset+
MY APP	My APP	SHIFT +  APP REPEAT	Shift + Green / APP /
Stop	Stop	HOLD	Stop / Hold
Rec	Rec	REC MODE	Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung


