 
 
 

 

 

 



 

 

 

 

 

 

 



 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[...]/Text		Text / Goto
	Guide		Guide / EPG / /--
	Zz/Sleep		Sleep / Timer
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Source		AV / Input / RDS
	[<>]/Format		Picture / Format
	[i]/Info		Info / Angle
	Home		Menu / Home
	P≡P/Swap		Fav / Marker / PC
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

 



 

 

 

Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
-----------------------	--	---------------------	--	-----------------------	--	---------------------	--

	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Audio/I/II		Audio / Lang I/II				

