













 





 

 
 
 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Settings		D.Menu / Top
	Search		Shift + Red / Netflix /
	Search		Fav / Marker / PC
	[< >]		Picture / Format
	Tv Guide		Guide / EPG / -/--
	≡/List		Shift + Smart / List
	≡/List		TV/Radio /
	Sources		AV / Input / RDS
	Smart Tv		Smart / List
	Home		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	TV/Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i+/Info		Info / Angle
	≡/Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Multiview		Display / Media
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+



