


 





 
 

 
 


 




 
 







 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/R
	Subtitle		Subt
	Teletex/MHEG		Text
	Source		AV
	Red/Demo		Red
	Green/Scenea		Green
	Yellow		Yellow
	Blue/AD		Blue
	Home		Smart
	Guide		Guide
	Options		Options
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Stop		Stop
	Rec		Rec
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Format		Format
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

4 GHI	4	4	4
5 JKL	5	5	5
6 MNO	6	6	6
7 PQRS	7	7	7
8 TUV	8	8	8
9 WXYZ	9	9	9
0 .@	0	0	0
SOUND	Sound	DUAL	Dual
PICTURE	Picture	SHIFT + PICTURE FORMAT	Shift + Format

Originalfernbedienung Ersatzfernbedienung

