



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DVD Menu		D. Menu
	OSD Menu		Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right




 

 


Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[...]		Subt
	:>		Format
	T-C		TV/R
	Audio		Dual
	Zoom		Eject
	Repeat		Text
	A-B Repeat		Options
	Shuffle		AV
	Play		Play
	Stop		Stop
	Pause		Pause





Originalfernbedienung    Ersatzfernbedienung

	>>		>>
	<<		<<
	>		>>
	<		<<

Originalfernbedienung    Ersatzfernbedienung