






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Tv Guide		Guide / EPG / -/-
	Setup		Setup / OPT /
	Format		Picture / Format
	Sources		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random










**Originalfernbedienung    Ersatzfernbedienung**

	Info		Info / Angle
	Options		Shift + Setup / OPT / Tools
	Back		Back / Return
	List		Smart / List
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		OK
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	CH-		CH- / Page-
	1		1
	2		2
	3		3





**Originalfernbedienung   Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung
	
	
	
	
	
	
	
	
	

**Originalfernbedienung   Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung

