 




 




 
 
 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Play		Play
	<<		<<
	>>		>>
	Tv Guide		Guide
	Setup		Menu
	[<>]/Format		Format
	Sources		AV
	Home		Smart
	Tv/Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Info		Info
	Back		Back
	Options		Options
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4



