

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	[<>]		Format
	Search		TV/R
	*		Menu
	Tv Guide		Guide
	List		List
	Sources		AV
	Smart Tv		Smart
	Home		Shift + Smart
	Exit/tv		Exit
	Red		Red




 

 
 
 
 
 
 


 
 




 

 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info
	Options		Options
	Back		Back
	Multiview		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Netflix		Media
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Text		Text

Originalfernbedienung Ersatzfernbedienung

