

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Ambilight		Display / Media
	List		Smart / List
	Tv Guide		Guide / EPG / -/--
	Voice		Audio / Lang I/II
	Top Pics		Picture / Format
	Sources		AV / Input / RDS
	[∴]		D.Menu / Top
	Exit/TV		Exit / Cancel / Clear
	Info		Info / Angle
	Up		Up
	Options		Setup / OPT /
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Netflix		Shift + Red / Netflix /
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Text		Text / Goto
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

