











 




















 



 








 



 



 













Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Menu / Home
	 Guide / EPG / -/--
	 Up
	 I< / Preset-
	 I< / CH- / Page-
	 Left
	 OK
	 Right
	 >I / Preset+
	 >I / CH+ / Page+
	 Down
	 Back / Return
	 [*]/Option / Setup / OPT /
	 III / Smart / List
	 Vol+
	 Mute / Dimmer

Originalfernbedienung	Ersatzfernbedienung
	 Vol-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 [...] / Subtitle / EQ
	 0
	 [ <> ] / Picture / Format

