
 




Originalfernbedienung **Ersatzfernbedienung**

	Power		Power
	HDMI ARC		3
	HDMI 1		1
	HDMI 2		2
	Optical		Up
	Bluetooth		Ok
	Music iLink		Down
	Coax		Right
	AUX		Left
	Night Mode On		Red
	Night Mode Off		Green
	Audio Sync+		4
	Audio Sync-		7
	Auto Volume On		Yellow
	Auto Volume		Blue
	Bass+		6
	Bass-		9

Originalfernbedienung **Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Treble+		Ch +
	Treble-		Ch -
	V.Surr		Subt

