 



 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Pause		Pause
	COAX		Red
	Optical		Green
	AUX		Yellow
	USB		Blue
	Bluetooth		Smart
	HDMI Arc		Media
	I<		I<<
	Play		Play
	>I		>>I
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Bass+		Up
	Bass-		Down
	Treble+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Treble-		Ch -
	Voice		Dual
	Movie		Pre Ch
	Music		Guide
	Audio Sync+		Right
	Audio Sync-		Left
	Night On		3
	Off Night		1

