


 



 


 

 




 

 


 
 
 
 

 







 

 

 

 
 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	HDMI/ARC		3
	HDMI1		1
	HDMI2		2
	Optical		Up
	Audio-In		Down
	Coax		Right
	Aux		Left
	Bluetooth		Ok
	On		Smart
	Off		Media
	Audio Sync+		Ch +
	Auto Volume On		List
	Auto Volume		Sleep
	Audio Sync-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Treble +		6
	Treble-		4
	Bass+		9
	Bass-		7
	V.Surr		0

