
 
 
 
 

 
 
 
 
 
 

 

 
 










 



 
 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Right		Right
	Tv/Video		TV/R
	VCR		Guide
	DVD		Pre Ch
	Source		AV
	Options		Options
	USB		Smart
	Select		D. Menu
	Clear		Exit
	Disc		Media
	Setup		Menu
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Left		Left

**Originalfernbedienung    Ersatzfernbedienung**

	OK		Ok
	<</REW		<<
	>>/FFW		>>
	Play		Play
	Pause		Pause
	I</Prev		I<<
	>I/Next		>>I
	Rec		Rec
	Stop		Stop
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Dubbing/Direct		Text
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3



