 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	CAM		Pre Ch
	TV/HDD		TV/R
	Return		Back
	Edit		Format
	Timer		AV
	Select		Options
	Y/Tuner		Text
	Menu/System		D. Menu
	Menu/Disc		Menu
	Info		Info
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	HDD/Browser		Media
	Guide/TV		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	Pause		Pause
	Play		Play
	I<<		I<<
	Rec/OTR		Rec
	>>I		>>I
	Jump Back		<<
	Jump FWD		>>





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T/C		Eject
	Disc Manager		List

Originalfernbedienung Ersatzfernbedienung

