





 









 


















 






 




 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	HDMI In		Display / Media
	HDMI Arc		Smart / List
	Optical		Setup / OPT /
	USB		8
	Bluetooth		9
	AUX		7
	I<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>I		>>I / Preset+
	Bass+		Shift + CH+ /
	Vol+		Vol+
	Treble+		CH+ / Page+
	Bass-		Shift + CH- /
	Mute		Mute / Dimmer
	Treble-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Sound		Sound / Title
	Off Surround		Shift + Audio / Lang I/II
	Surround On		Audio / Lang I/II
	Off Auto Volum		Down
	Auto Volum On		Up
	Off Night		Shift + Sleep / Timer
	Night On		Sleep / Timer
	Audio Sync-		Shift + Vol-
	Audio Sync+		Shift + Vol+
	Dim		Shift + Mute / Dimmer

