


 
 


 
 
 









 

 


 
 


 
 




 



 
 
 
 

 


 
 
 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play		Play
	Audio In		Red
	AUX		Green
	Pause		Pause
	Optical		Yellow
	I<		I<<
	>I		>>I
	Bluetooth		Blue
	HDMI IN		1
	HDMI ARC		3
	Vol+		Vol +
	Mute		Mute
	Vol-		Vol -
	Sound		Dual
	Treble+		Ch +
	Treble-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Audio Sync +		Right
	Audio Sync -		Left
	Bass+		Up
	Bass-		Down
	Settings Vol		Menu
	Settings Delay		Info
	Night		Media
	DIM/Exit Settings		Exit

