
 

 




 
 



 
 

 

 
 
 
 
 


 
 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	Clear		Exit
	Mute		Mute
	Record		Rec
	Timer		AV
	Red/Select		Red




 


Originalfernbedienung Ersatzfernbedienung

	Green/Smart		Green
	Yellow/Lock		Yellow
	Blue/Sleep		Blue
	Menu		Menu
	Teletext		Text
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	>I/Index		Format
	>I</Still		3D
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Play		Play
	>>		>>

Originalfernbedienung Ersatzfernbedienung

