



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	COAX		Red
	OPTICAL		Green
	AUX		Yellow
	AUDIO IN		Blue
	USB		Media
	BLUETOOTH		Smart
	HDMI ARC		Options
	I<		I<<
	PLAY		Play
	PAUSE		Pause
	>I		>>I
	BASS+		Up
	BASS-		Down
	VOL+		Vol +
	VOL-		Vol -
	MUTE		Mute

Originalfernbedienung Ersatzfernbedienung

	TREBLE+		Ch +
	TREBLE-		Ch -
	SOUND		Dual
	ON NIGHT		Right
	OFF NIGHT		Left
	AUDIO SYNC+		>>
	AUDIO SYNC -		<<
	DIM		Subt

