



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tuner		Shift + 1
	CD		Shift + 2
	CDR / Tape		Shift + 3
	VCR		Shift + 4
	TV		Shift + 5
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cinema Link		Media


Originalfernbedienung Ersatzfernbedienung

	DVD / 6 CH.		Pre Ch
	Menu / Guide		Menu
	Menu / Guide		Guide
	OK		Ok
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Play		Play
	Stop		Stop
	I< Channel/Track		I<<
	Channel/Track >I		>>I
	Pause		Pause
	Disc / FR.D./Index		Smart





Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	TV		Blue
	Mute Tv		Mute
	1 Tv		1
	2 Tv		2
	3 Tv		3
	4 Tv		4
	5 Tv		5
	6 Tv		6
	7 Tv		7
	8 Tv		8
	9 Tv		9
	0 Tv		0
	Menu/Guide Tv		Menu
	Menu/Guide Tv		Guide
	OK Tv		Ok
	Up Tv		Up


 


 
 


 
 

 
 

 
 


 

Originalfernbedienung Ersatzfernbedienung

	Down Tv		Down
	Right Tv		Right
	Left Tv		Left
	Vol+ Tv/CD		Vol +
	Vol- Tv/CD		Vol -
	Play Tv		Play
	Stop Tv		Stop
	News/TA Tv		Info
	I< Channel/Track		I<<
	Channel/Track >I		>>I
	Power CD		Shift + Power
	CD		Yellow
	Mute CD		Shift + Mute
	1 CD		Shift + 1
	2 CD		Shift + 2
	3 CD		Shift + 3
	4 CD		Shift + 4


 
 

 

 
 
 

 


 




Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	VCR		Yellow
	Mute VCR		Mute
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	Menu/Guide		Menu
	Up VCR		Up
	OK VCR		Ok
	Down VCR		Down

Originalfernbedienung Ersatzfernbedienung

	Right VCR		Right
	Left VCR		Left
	Vol+ VCR		Vol +
	Vol- VCR		Vol -
	Play VCR		Play
	Stop VCR		Stop
	I< Channel/Track VCR		I<<
	Channel/Track >I VCR		>>I
	Pause VCR		Pause
	T.C/Index VCR		Back
	Power		Shift + Power
	CDR/Tape		Blue
	1 CDR/Tape		Shift + 1
	2 CDR/Tape		Shift + 2
	3 CDR/Tape		Shift + 3
	4 CDR/Tape		Shift + 4
	5 CDR/Tape		Shift + 5



