
 
 
 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Rec		Rec
	Info		Info
	Red / TV/Radio		Red
	Red / TV/Radio		TV/R
	Green / Media		Green
	Green / Media		Media
	Yellow / Audio		Yellow
	Yellow / Audio		Dual
	Blue		Blue
	EPG		Guide
	Back		Back
	Up / CH +		Up

Originalfernbedienung Ersatzfernbedienung

	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Menu		Menu
	Exit		Exit
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	USB		AV
	Fav		Pre Ch
	1		1





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX		Text
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

