







 






 



 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Ambilight		Options
	*		Menu
	Colors		Info
	Sources/Pair		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	Home		Smart
	+		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Media
	Windows		D. Menu
	CH+		Ch +
	CH-		Ch -
	Rakuten Tv		TV/R
	Exit TV		Exit
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	TV Guide/List		Guide

Originalfernbedienung Ersatzfernbedienung

