












 













 






 





 

 

 



 

 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	USB		Blue
	CD		Yellow
	Tuner		Green
	AUX		Red
	Vol-		Vol -
	Vol+		Vol +
	I<<		I<<
	>>I		>>I
	Album/Presets		Ch -
	Album/Presets		Ch +
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Program	 + 	Shift + Sleep
	Clock/Display		Info




 







 
 
 

















 



Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Sleep		Sleep
	DBB		Dual
	DSC		Subt
	RDS/News		TV/R
	Mute		Mute
	Repeat		Text
	Shuffle		Format



 

 
 
 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	USB		Blue
	CD		Yellow
	Tuner		Green
	AUX		Red
	Vol-		Vol -
	Vol+		Vol +
	I<<		I<<
	>>I		>>I
	Album/Preset		Ch -
	Album/Preset		Ch +
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Program	 + 	Shift + Sleep
	Clock/Display		Info
































Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Sleep		Sleep
	DBB		Dual
	DSC		Subt
	RDS/News		TV/R
	Mute		Mute
	Repeat		Text
	Shuffle		Format


 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	USB		Blue
	CD		Yellow
	Tuner		Green
	AUX		Red
	Vol-		Vol -
	Vol+		Vol +
	I<<		I<<
	>>I		>>I
	Album/Presets		Ch -
	Album/Presets		Ch +
	Stop		Stop
	Program		Shift + Sleep
	Clock/Display		Info
	Timer		AV
	Sleep		Sleep



 
 



 













 

 



 

 
Originalfernbedienung Ersatzfernbedienung

	DBB		Dual
	DSC		Subt
	RDS/News		TV/R
	Mute		Mute





Originalfernbedienung Ersatzfernbedienung

	USB		Blue
	CD		Yellow
	Tuner		Green
	AUX		Red
	Open/Close		Eject
	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Clock/Display		Info
	Timer		AV
	Sleep		Sleep
	DBB		Dual
	DSC		Subt
	RDS/News		TV/R
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

