



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Phono		Shift + 9
	Tuner		Shift + 6
	CD		Shift + 3
	CDR / Tape		Shift + 5
	TV		Shift + 1
	VCR		Shift + 4
	SAT		Shift + 0
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Menu / Guide		Menu / Home
	Up		Up
	OK		OK
	Left		Left
	Right		Right
	Vol +		Vol+
	Down		Down
	Vol -		Vol-
	i / News TA		Info / Angle
	I< / Channel/Track -		I<< / Preset-
	>I / Channel/Track +		>>I / Preset+
	Loudness		Audio / Lang I/II
	SubW On/Off		Subtitle / EQ
	FR. D.		Zoom / Size





Originalfernbedienung Ersatzfernbedienung

	Night		Sleep / Timer
	Virtual Mode		Sound / Title
	Surround On/Off		Eject / Surround
	Sub Woofer +		CH+ / Page+
	Rear Channel +		>> / Tune+
	Surround Mode		Picture / Format
	Sub Woofer -		CH- / Page-
	Rear Channel -		<< / Tune-
	Test Tone		Text / Goto

Originalfernbedienung Ersatzfernbedienung

