



Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	CD		Yellow
	Play		Play
	AUX		Red
	VCR		Smart
	TV		Media
	Tuner		Green
	Tape		Blue
	Display		Info
	Mute		Mute
	DBB		Guide
	DSC		Pre Ch
	Sleep		Sleep
	Shuffle		Options
	Volume+		Vol +
	Volume-		Vol -
	Brightness		Subt

Originalfernbedienung Ersatzfernbedienung

	Stop CD		Stop
	Next >I CD		>>I
	I< Prev. CD		I<<
	Pause CD		Pause
	>> CD		>>
	<< CD		<<
	Tv Vol+		Right
	Tv Vol-		Left
	Power AUX		Shift + Power
	Power TV		TV/R





Originalfernbedienung Ersatzfernbedienung

	VCR		Smart
	TV		Media
	AUX		Red
	Tuner		Green
	CD		Yellow
	Tape		Blue
	Power VCR		Power
	Mute		Mute
	Volume +		Vol +
	Volume -		Vol -
	Play VCR		Play
	Stop VCR		Stop
	Pause VCR		Pause
	I< Prev. VCR		I<<
	Next >I VCR		>>I
	<< VCR		<<
	>> VCR		>>

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung


	Tuner		Green
	CD		Yellow
	VCR		Smart
	TV		Media
	Aux		Red
	Tape		Blue
	Power Tuner		Power
	Volume +		Vol +
	Volume -		Vol -
	Mute		Mute
	Next >I Tuner		>>I
	I< Prev. Tuner		I<<
	<< Tuner		<<
	>> Tuner		>>

Originalfernbedienung Ersatzfernbedienung







Originalfernbedienung Ersatzfernbedienung

	Tape		Blue
	Power Tape		Power
	CD		Yellow
	Tuner		Green
	AUX		Red
	VCR		Smart
	TV		Media
	Side Tape		Dual
	Mute		Mute
	Volume +		Vol +
	Volume -		Vol -
	Play Tape		Play
	Stop Tape		Stop
	Next >I Tape		>>I
	<< Tape		<<
	I< Prev. Tape		I<<
	Pause Tape		Pause

Originalfernbedienung Ersatzfernbedienung

	>> Tape		>>

