

 

 

 
 
 

 

 



 

 


 

 
 
 
 
 
 








 



 

 










 



 




 

 
 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	>>		>>
	Play		Play
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Find		Guide
	Adjust		D. Menu
	Source		AV
	Options		Options
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Home		Menu
	Home		Smart
	Back		Back
	CH+ / >I		Ch +
	CH+ / >I		>>I
	CH- / I<		Ch -
	CH- / I<		I<<
	Vol-		Vol -
	Vol+		Vol +
	Mute		Mute
	1		1
	2		2
	3		3
	4		4



