

 

 















































 





 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Search		Sleep / Timer
	Sources		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	←		Back / Return
	Home		Menu / Home
	=		Setup / OPT /
	<<		<< / Tune-
	▶		Play / Slow
	>>		>> / Tune+
	■		Stop / Hold
	⏸		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Netflix		Shift + Red / Netflix /
	Windows		Display / Media
	Rakuten Tv		Smart / List
	Vol+		Vol+
	Mute		Mute / Dimmer
	Vol-		Vol-
	CH+		CH+ / Page+
	Exit/Tv		Exit / Cancel / Clear
	CH-		CH- / Page-
	1		1
	2		2
	3		3



