










 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Ambilight		Zoom / Size
	Info		Info / Angle
	Search		D.Menu / Top
	Sources		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	←		Back / Return
	Home		Shift + Menu /
	=		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Netflix		Shift + Red / Netflix /
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Windows		Smart / List
	Exit/Tv		Exit / Cancel / Clear
	Vol-		Vol-
	Rakuten Tv		TV/Radio /
	CH-		CH- / Page-
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	List/Tv Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

