



















 

 



















 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	CD		3
	Tuner		6
	Tape		5
	AUX		7
	Program		TV/Radio /
	Tape A/B		Smart / List
	Display/Clock		Display / Media
	Vol-		Vol-
	Vol+		Vol+
	I< Preset		I<< / Preset-
	Preset >I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+






 






 

 

 


Originalfernbedienung Ersatzfernbedienung

	Tape Rec		Rec / Rec Mode
	USB Rec		Shift + Rec / Rec Mode
	Snooze		OK
	Inc.Surr.		Subtitle / EQ
	DIM		Shift + Mute / Dimmer
	Sleep/Timer		Sleep / Timer
	Timer On/Off		Shift + Sleep / Timer
	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	USB		8
	Mute		Mute / Dimmer








 




 
 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	CD		3
	Tuner		6
	Tape		5
	AUX		7
	Repeat		Green / APP / Repeat
	Program		TV/Radio /
	Shuffle		Blue / Prime Video / Random
	Tape A/B		Smart / List
	Display/Clock		Display / Media
	Vol-		Vol-
	Vol+		Vol+
	I< Preset		I<< / Preset-
	Preset >I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Tape Rec		Rec / Rec Mode
	USB Rec		Shift + Rec / Rec Mode
	Snooze		OK
	Inc.Surr.		Subtitle / EQ
	DIM		Shift + Mute / Dimmer
	Sleep/Timer		Sleep / Timer
	Timer On/Off		Shift + Sleep / Timer
	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	USB		8
	Mute		Mute / Dimmer










 






 
 
 






 





Originalfernbedienung Ersatzfernbedienung




	Standby		Power
	CD		3
	Tuner		6
	Tape		5
	AUX		7
	Repeat		Green / APP / Repeat
	Program		TV/Radio /
	Tape A/B		Smart / List
	Display/Clock		Display / Media
	Vol-		Vol-
	Vol+		Vol+
	I< Preset		I<< / Preset-
	Preset >I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung


















	>>		>> / Tune+
	Tape Rec		Rec / Rec Mode
	USB Rec		Shift + Rec / Rec Mode
	Snooze		OK
	Inc.Surr.		Subtitle / EQ
	DIM		Shift + Mute / Dimmer
	Sleep/Timer		Sleep / Timer
	Timer On/Off		Shift + Sleep / Timer
	Bass-		Down
	Bass+		Up
	Treble-		CH- / Page-
	Treble+		CH+ / Page+
	USB		8
	Mute		Mute / Dimmer




Originalfernbedienung Ersatzfernbedienung

Standby		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Tape Rec		Rec / Rec Mode
<<		<< / Tune-
>>		>> / Tune+
I< Preset		I<< / Preset-
Preset >I		>>I / Preset+
Inc.Surr.		Subtitle / EQ
Sleep/Timer		Sleep / Timer
Program		TV/Radio /
Bass+		Up
USB Del USB		Shift + Smart / List
Snooze		OK
Bass-		Down

Originalfernbedienung Ersatzfernbedienung

Vol+		Vol+
Tape A/B		Smart / List
Treble+		CH+ / Page+
Vol-		Vol-
Display/Clock		Display / Media
Treble-		CH- / Page-
CD		3
Tape		5
Tuner		6
AUX		7
USB		8
Repeat		Green / APP / Repeat
Shuffle		Blue / Prime Video / Random
DIM		Shift + Mute / Dimmer
Play USB		Shift + Play /
Pause USB		Shift + Pause / Step /
Stop USB		Shift + Stop /

Hold





Originalfernbedienung Ersatzfernbedienung

USB Rec		+		Shift + Rec / Rec Mode
<< USB		+		Shift + << /
>> USB		+		Shift + >> /
< Preset USB		+		Shift + < / Preset-
Preset > USB		+		Shift + > / Preset+
Timer On/Off		+		Shift + Sleep / Timer
Program USB		+		Shift + TV/Radio / Program
Display/Clock USB		+		Shift + Display / Media
Repeat USB		+		Shift + Green / APP /
Shuffle USB		+		Shift + Blue / Prime

Originalfernbedienung Ersatzfernbedienung

