













 

 







 

















 






 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Source		AV / Input / RDS
	Home		Menu / Home
	Format		Picture / Format
	Back		Back / Return
	List		Smart / List
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Adjust		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Options		Setup / OPT /
	Vol+		Vol+
	Mute		Mute / Dimmer
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



