


**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv/Video		TV/Radio /
	VCR		Shift + 4
	DVD		Shift + 2
	Source		AV / Input / RDS
	Tools		Shift + Setup / OPT / Tools
	Repeat		Green / APP / Repeat
	Select		Display / Media
	Clear		Exit / Cancel / Clear
	Disc Menu		D.Menu / Top
	Setup		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	Display		Info / Angle
	<</REW		<< / Tune-
	Play/Pause		Play / Slow
	>>/FFW		>> / Tune+
	I</Prev		I<< / Preset-
	>I/Next		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Tv Vol+		Vol+
	Dubbing/Direct		Text / Goto
	P+		CH+ / Page+
	Tv Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4



