














Originalfernbedienung Ersatzfernbedienung

|   |             |   |                               |
|---|-------------|---|-------------------------------|
|    | Eject       |    | Eject / Surround              |
|    | Standby/On  |    | Power                         |
|    | Menu        |    | Menu / Home                   |
|    | Status/Exit |    | Exit / Cancel / Clear         |
|    | Clear       |    | Shift + Exit / Cancel / Clear |
|    | 1           |    | 1                             |
|    | 2           |    | 2                             |
|    | 3           |    | 3                             |
|    | 4           |    | 4                             |
|    | 5           |    | 5                             |
|   | 6           |   | 6                             |
|  | 7           |  | 7                             |
|  | 8           |  | 8                             |
|  | 9           |  | 9                             |
|  | Sleep       |  | Sleep / Timer                 |
|  | 0           |  | 0                             |
|  | System      |  | Smart / List                  |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                        |
|---|-------------|---|------------------------|
|    | Record/OTR  |    | Rec / Rec Mode         |
|    | Up          |    | Up                     |
|    | Play        |    | Play / Slow            |
|    | > </Still   |    | Pause / Step / Freeze  |
|    | <<          |    | << / Tune-             |
|    | Left        |    | Left                   |
|    | Right       |    | Right                  |
|    | >>          |    | >> / Tune+             |
|    | P+          |    | CH+ / Page+            |
|    | Stop        |    | Stop / Hold            |
|   | Down        |   | Down                   |
|  | Vol+        |  | Vol+                   |
|  | P-          |  | CH- / Page-            |
|  | Mute        |  | Mute / Dimmer          |
|  | Vol-        |  | Vol-                   |
|  | Red/SV/V+   |  | Red / Netflix / Search |
|  | Green/Smart |  | Green / APP / Repeat   |





Originalfernbedienung Ersatzfernbedienung

|  |             |  |                             |
|--|-------------|--|-----------------------------|
|  | Green/Smart |  | Picture / Format            |
|  | Yellow      |  | Yellow / YouTube / Repeat   |
|  | Blue/Index  |  | Blue / Prime Video / Random |
|  | [=i]        |  | Info / Angle                |
|  | Text        |  | Text / Goto                 |
|  | [=?]        |  | D.Menu / Top                |
|  | [=◆]        |  | Zoom / Size                 |
|  | [=x]        |  | TV/Radio /                  |
|  | [=o]        |  | Setup / OPT /               |
|  | [=+]        |  | AV / Input / RDS            |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

