





 



 

 









 
 





 







Originalfernbedienung	Ersatzfernbedienung
 P100	 Display / Media
 Power	 Power
 REV	 << / Tune-
 Doub	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Hold	 Stop / Hold
 4	 4
 5	 5
 6	 6
 Sub	 Subtitle / EQ
 Update	 D.Menu / Top
 7	 7
 8	 8
 9	 9
 Mix	 Text / Goto

Originalfernbedienung	Ersatzfernbedienung
 AV	 AV / Input / RDS
 0	 0
 -/--	 Guide / EPG / -/--
 P+	 CH+ / Page+
 Up	 Up
 Mute	 Mute / Dimmer
 TV/TXT	 TV/Radio /
 Menu	 Menu / Home
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Swap	 Back / Return
 P-	 CH- / Page-
 Down	 Down
 16:9	 Picture / Format





	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Violet	 Smart / List		
	[ ]	 Setup / OPT /		
	♪	 Sound / Title		
	PP	 Shift + Smart / List		

