


 

 




 
 
 
 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-------------------|
|  | Power |  | Power |
|  | Input 1 |  | Shift + 1 |
|  | Input 2 |  | Shift + 2 |
|  | Input 3 |  | Shift + 3 |
|  | Input 4 |  | Shift + 4 |
|  | Input 5 |  | Shift + 5 |
|  | PC |  | Fav / Marker / PC |
|  | [I+]/[III] |  | Setup / OPT / |
|  | [<>] |  | Picture / Format |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------------------|
|  | 9 |  | 9 |
|  | [I+]/Timer |  | Info / Angle |
|  | [I+]/Timer |  | Sleep / Timer |
|  | 0 |  | 0 |
|  | HDMI Control |  | Smart / List |
|  | P+ |  | CH+ / Page+ |
|  | I-II |  | Audio / Lang I/II |
|  | Vol+ |  | Vol+ |
|  | P- |  | CH- / Page- |
|  | Mute |  | Mute / Dimmer |
|  | Vol- |  | Vol- |
|  | Return |  | Back / Return |
|  | Up |  | Up |
|  | Home Menu |  | Menu / Home |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |



