 

 

 



 

 

 

 































 



 







 

 

 









Originalfernbedienung Ersatzfernbedienung













 





 



 


 
 

 
 
	Standby/on		Power
	Open/close		Eject / Surround
	CD		Shift + 3
	USB		Shift + 8
	Tuner		Shift + 6
	Audio In		Audio / Lang I/II
	BT Audio		Shift + 9
	Clock/Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	Equalizer		Setup / OPT /
	4		4
	5		5
	6		6
	P.Bass		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Bass/Treble		Shift + Sound / Title
	Clear		Exit / Cancel / Clear
	0		0
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Display		Display / Media
	Up/Tune+		Up
	Folder		Text / Goto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down/Tune-		Down
	Memory/Progra		TV/Radio /





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Preset+		>>  / Preset+				
	Mute		Mute / Dimmer				
	Vol+		Vol+				
	Preset-		<< / Preset-				
	Dimmer		Shift + Mute / Dimmer				
	Vol-		Vol-				
	<< /<<		<< / Tune-				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>/>>		>> / Tune+				
	ST/Mono		Shift + Audio / Lang I/II				
	RDS ASPM		Shift + Smart / List				
	RDS PTY		Smart / List				
	RDS Display		Shift + Display / Media				

